



Sega Dreamcast Top Cover Replacement

Written By: wkwong



INTRODUCTION

A guide to remove the Top Cover of the Sega Dreamcast.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Expansion Bay



⚠ Verify that the console is disconnected from the AC outlet before you begin.

- Flip the console over on its back.
- Take note of your model number, in case replacement parts are needed.

Step 2



- Remove the expansion bay by applying pressure to the small clip on the expansion bay while prying it away from the console.

Step 3 — Top Cover



- **Locate and remove all four black 12mm Phillips #02 screws** from the underside of the console.
- ⓘ The fourth screw is hidden under the expansion bay if it has not already been removed.

Step 4



- ⚠ Be careful that the internal components do not topple out.
- **Flip the console topside up.**
- **Remove the top cover** of the chassis by gently lifting the upper portion of the console.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 04:30:30 PM.